



**SILENT
KNIGHT**

by Honeywell

5860 Remote Fire Annunciator Installation Quick Reference

The optional Model 5860 Remote Annunciator, as shown in Figure 1, can be surface or flush mounted.



Figure 1: Model 5860 Remote Annunciator

5860 installation involves the following steps:

1. Make sure power is off at the panel.
2. Annunciator is assembled at the factory. Disassemble as needed.
3. Mount annunciator.
4. Wire annunciator to the panel. See
5. Use the DIP switches on the back of the 5860 to set the annunciator ID. See Figure 4.

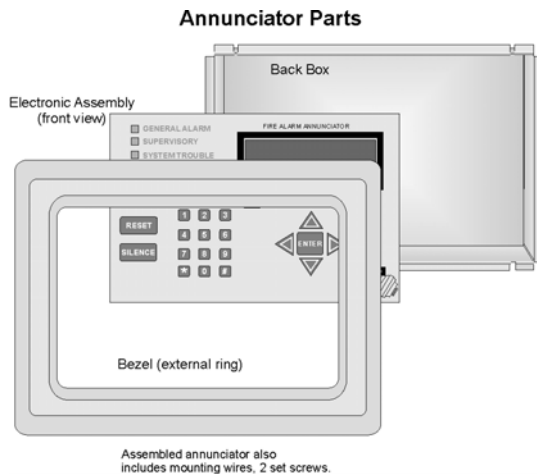


Figure 2: 5860 Parts

Wiring Connections

Wire the 5860 to the FACP as Shown in Figure 3.


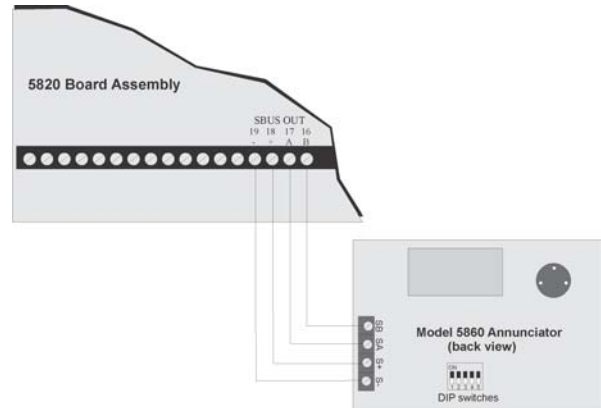


Figure 3: SBUS Connections

Product	Max. 5860s Allowed	For more Information see Manual PN
5820XL/5820XL-EVS	12	LS10061-001SK-E
5808	12	151274-L8
5700	8	151295

Possible ID Numbers

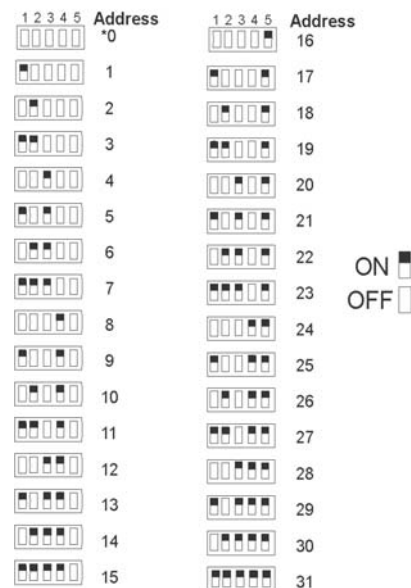

*Note: Address 0 cannot be used.

Figure 4: DIP Switch settings

Mounting the 5860

This section describes mounting the remote annunciator. The annunciator can be flush- or surface-mounted.

Annunciator Dimensions

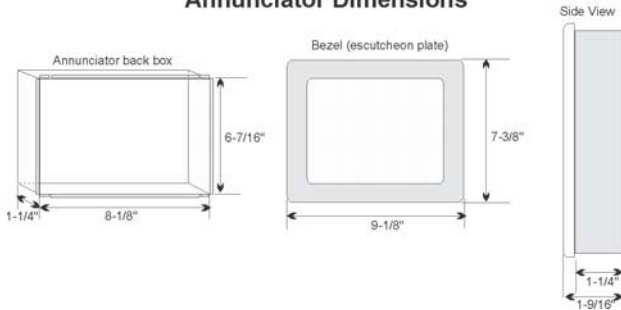


Figure 5: Annunciator Dimensions

Surface Mounting

The Model 5860TG (gray) and 5860TR (red) trim ring kits are available for use when surface mounting.


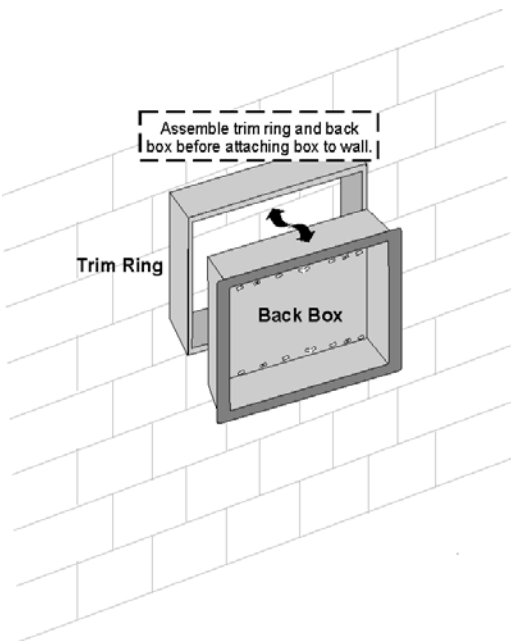


Figure 6: Surface Mounting

Flush Mounting

This section of the manual describes flush mounting. Follow these steps to flush mount the 5860:

Securing Back Box to Wall for Flush Mounting

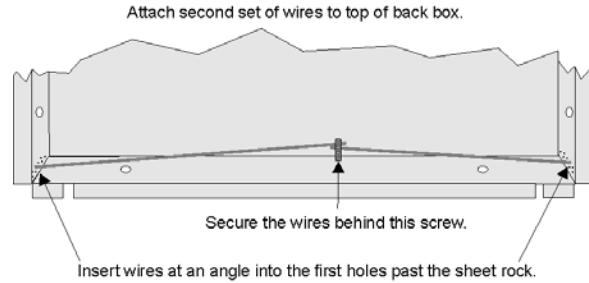

Flush Mounting with Electrical Box (Example)

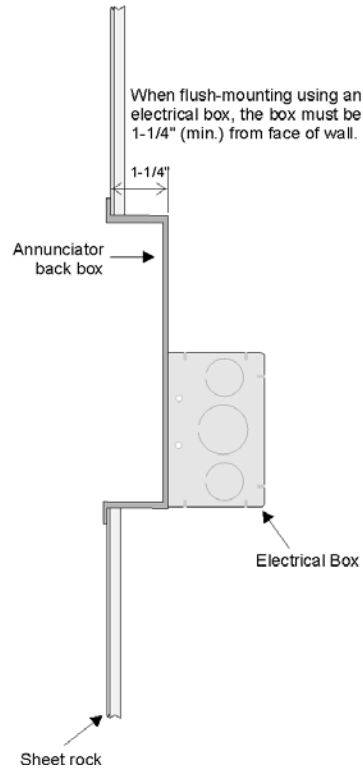


Figure 7: Flush Mounting



12 Clintonville Road
Northford, CT 06472-1610 USA
203-484-7161
Fax: 203-484-7118
www.silentknight.com

© 2014 Honeywell International Inc.