



**SILENT  
KNIGHT**


by Honeywell

## FFT-STSS and FFT-STSR Single Telephone Station Installation Instructions

The FFT-STSS is compatible with the Silent Knight Fire Fighters Telephone IFP-FFT and SK-FFT series.

The Single Telephone Station series has a handset with a push-to-talk switch for communication with the main FFT controller or other remote handsets.


For more information refer to the IFP-FFT installation manual PN 54708 or the SK-FFT installation manual PN 54711.

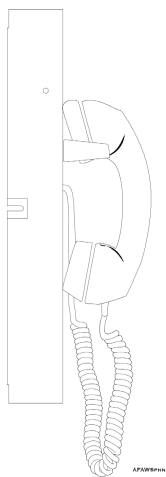 


**Figure 1: Telephone Chassis**



**Figure 2: Backbox**

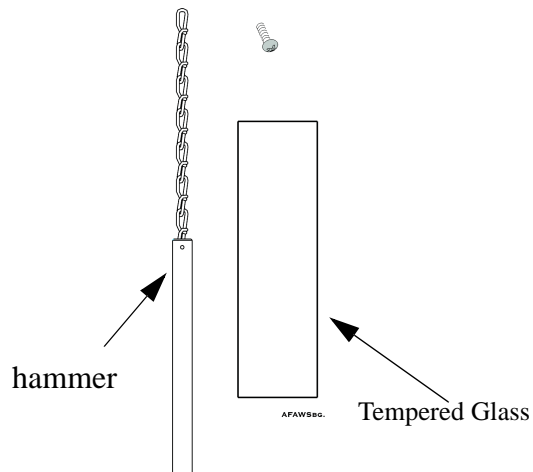 

**Figure 3: Breakglass Kit**

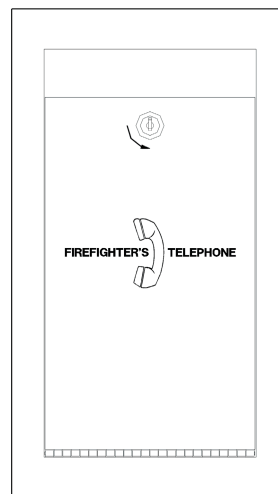 

**Figure 4: FFT-STSR Recessed Mount Door  
with Keylock**

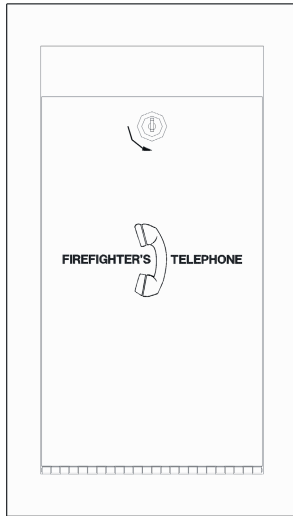 


Figure 5: FFT-STSS Surface mount door with Keylock

## System Wiring

Max. riser wiring resistance is 50 ohms, 10,000 ft. (3048 m) max. wiring distance at 14AWG.

System wiring for telephones with coiled cord handsets must not be connected to outside wiring or run the same conduit or cable tray as power or cable TV lines.

## Assembly of Units with Coiled Cord Handsets

The following assembly steps are for telephones with coiled cord handsets. These steps must be accomplished once the enclosure has been mounted and the system wiring is in place

1. Attach system wiring to the terminal block on the telephone chassis assembly
2. Install 6-32 nut in backbox. Do not tighten.
3. Install telephone chassis assembly in backbox.
4. Install trim ring on backbox with 6-32 wing nuts. Do not tighten.

5. Install door assembly. Tighten wing nuts.

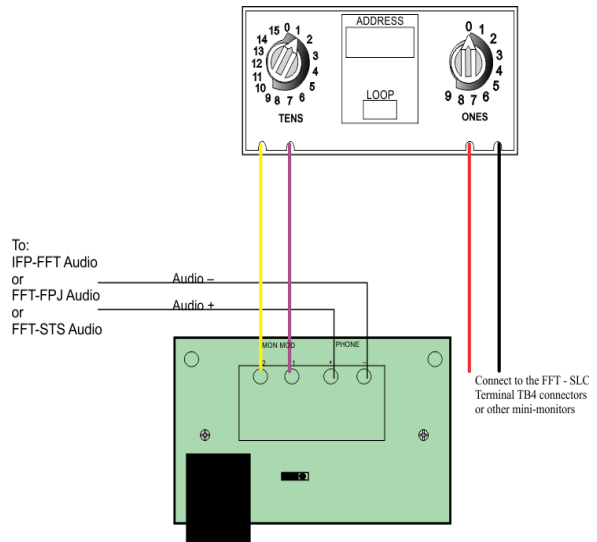 


Figure 6: FFT-STSR Telephone Connection



12 Clintonville Road  
Northford, CT 06472-1610 USA  
203-484-7161  
Fax: 203-484-7118  
www.silentknight.com

© 2011 Honeywell International Inc.