

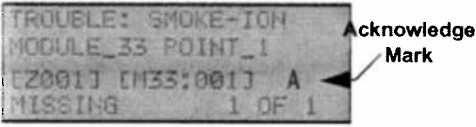


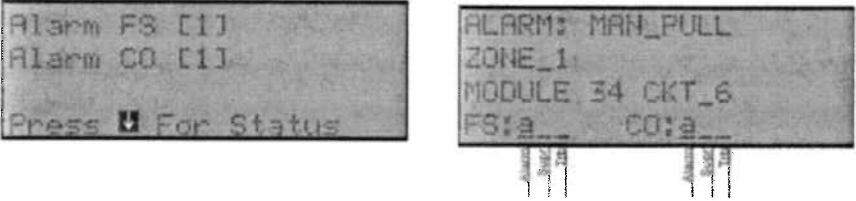




 





SILENT KNIGHT

by Honeywell

Model 5700 Basic Operating Instructions

These Instructions must be framed and displayed next to the 5700 panel in accordance with NFPA 72 fire code for Local Protected Fire Alarm Systems. Test the system in accordance to NFPA 72.

Operation	Task to Perform
Silence Alarms and Troubles	Press SILENCE then enter a code if prompted. Silence LED will light.
Reset Alarms	Press RESET then enter a code if prompted.
Acknowledge Alarms and Troubles	Press ACK then enter a code if prompted. When the Alarm or Trouble is acknowledged an A will appear in the annunciator display as shown Below. 
View Alarms and Troubles	Press the  or  button to view Alarms and Troubles. 
Conduct a Fire Drill	<ol style="list-style-type: none"> 1. Press ENTER to access Main Menu, then enter a code if prompted. 2. Press 1 to select System Tests, then press 1 to select Fire Drill. 3. Press ENTER to start the fire drill. 4. Press ENTER to end the fire drill.
View a Points Status	<ol style="list-style-type: none"> 1. Press ENTER to access Main Menu, then enter a code if prompted. 2. Press 2 to select Point Functions. 3. Enter code if prompted, then press 2 to select Point Status. 4. Select the module the device is located on by using the  or . Then press ENTER. 5. Enter the point number.
Check Detector Sensitivity	<ol style="list-style-type: none"> 1. Follow steps 1 through 5 for viewing a point status. 2. Press  to view detector sensitivity.
Set Time and Date	<ol style="list-style-type: none"> 1. Press ENTER to access Main Menu, then enter a code if prompted. 2. Press 4 to select Set Time & Date. Enter a code if prompted 3. Make changes in the fields on the screen as necessary. 4. Press ENTER if you wish to keep the changes. 5. Press ENTER to set the entered time and date.
Enable / Disable a Point	<ol style="list-style-type: none"> 1. Rotate the key or enter a code to access to access Main Menu. 2. Press 2 to select Point Functions. 3. Press 1 to select Disable / Enable Point. 4. Press 7 to Disable / Enable Pt. 5. Use the  or  to move through the list. Then press ENTER to select the module where the point you want to disable/enable is located. 6. Enter the point or circuit number that you want to disable/enable. 7. Press  key to toggle between NORMAL (enable) or DISABLE.
View Event History	<ol style="list-style-type: none"> 1. Press ENTER to access Main Menu, then enter a code if prompted. 2. Press 3 to select Event History. 3. Press the  or  to view events in the history buffer.
For Service Call:	

Cut Along the Dotted Line