

# SK-2/E & SK-4/E Fire Alarm Control Panel

## Operating Instructions

**NORMAL** - Only the GREEN A.C. POWER LED is on.  
All other LED's are off.

**PANEL KEY** - The key to open the panel can be found at the following location:

---

### **WHEN AUDIBLE DEVICES ARE SOUNDING -**

#### **FOR AN ALARM**

1. Evacuate the protected area
2. Notify the monitoring service and/or the Fire Department immediately. Tell them briefly what happened and your current status.

Phones: \_\_\_\_\_  
Fire Department Monitoring Service

3. If the Fire Department is responding, be prepared to provide directions to arriving firefighters.

#### **FOR TROUBLE ONLY**

1. Notify the monitoring service and/or Fire department if this panel is connected to either one, and tell them what is happening.
2. Silence audible devices by unlocking and opening the panel and pressing the ACKNOWLEDGE key for a minimum of one second. The yellow SYSTEM TROUBLE LED will remain on. Contact authorized service personnel immediately! (See Below).

### **WARNING!**

**DO NOT ALLOW TROUBLE CONDITIONS TO REMAIN LOGGED IN THE SYSTEM. THE PROTECTION THE SYSTEM OFFERS HAS BEEN COMPROMISED, OR ELIMINATED WHEN A TROUBLE CONDITION EXISTS.**

#### **To return to normal after an alarm**

1. Do not enter the protected area until safe to do so.
2. Clear all initiating devices. Smoke detectors will not reset if there is still smoke in the area.
3. Reset the control panel (PRESS the RESET key)

#### **Power failure or brownout**

If AC power drops too low or fails, the AC POWER LED will go out, the SYSTEM TROUBLE LED will turn on, the POWER TROUBLE LED will turn on and the panel buzzer and any other audible trouble devices will sound. Contact authorized service personnel immediately. See below.

#### **Manual activation (Fire Drill or otherwise)**

Notification Appliance Circuits (NACs) can be activated by activating a Manual Pull Station.

*NOTE:* You may want to disconnect municipal box by sliding DISCONNECT switch, located on SK-4XTM module, to its disconnect position (to the right). If a DACT is connected, notify the monitoring service before conducting any fire drills or tests.

#### **Alarm Silencing**

Notification Appliance Circuits may be silenced by pressing the ACKNOWLEDGE key and then the ALARM SILENCE key. The ALARM SILENCE LED will turn on. Subsequent alarms will reactivate circuits. Press the RESET key to clear the "silenced" condition.

*NOTE:* Notification Appliance Circuits may be programmed as nonsilenceable. Also, Signal Silence Inhibit, if enabled, will prevent silencing of NACs for one minute after an alarm (see manual).

#### **To test the lamps and piezo sounder**

Press and release the RESET key and check all LEDs. Every LED should be on and the piezo should sound.

For more information, refer to the SK-2/E & SK-4/E Manual, Document #52604. It is kept in the following location:

---

**THIS SHEET SHALL BE FRAMED ADJACENT TO THE CONTROL PANEL**



**SILENT  
KNIGHT**

by Honeywell

In the event of trouble, contact the local authorized Silent Knight Service Representative

Name: \_\_\_\_\_

Company: \_\_\_\_\_

Address: \_\_\_\_\_

Telephone Number: \_\_\_\_\_