



**SILENT
KNIGHT**
By Honeywell

5815RMK Remote Mounting Kit Installation Instructions

The 5815RMK is a remote mounting kit that lets you install up to two 5815XL SLC expanders in a single cabinet.

Note: Installation and wiring of this device must be done in accordance with NFPA 72 and local ordinances.

Specifications

Dimensions: 10-3/8"W x 10-3/16"H x 3"D
26.4 cm W x 25.9 cm H x 7.6 cm D

Compatibility

The 5815RMK is compatible with Silent Knight 5815XL SLC expanders.

Mounting

It is important to protect the 5815RMK and its contents from water. To prevent water damage, follow the mounting requirements listed below:

- Do not mount directly on exterior walls, especially masonry walls (condensation)
- Do not mount directly on exterior walls below grade (condensation)
- Protect from plumbing leaks
- Protect from splash caused by sprinkler inspection ports
- Do not mount in areas with humidity-generating equipment (such as dryers, production machinery)
- Mount in an area that always remains within the following temperature and humidity range: 0°C-49°C (32°F-120°F) and 10%-93% at 30°C (86°F) noncondensing.
- Mount in an indoor, dry location.

Warning!

The electronic components on the 5815XL and the FACP are sensitive to electrostatic discharge. Wear a grounding strap when handling any of the boards.

To mount the 5815RMK cabinet:

1. Remove the 5815RMK from its packing container.
2. Unlock the 5815RMK cabinet and lift up on the cabinet door to remove it.
3. Unscrewing the two mounting plate screws as shown in Figure 1 to remove the mounting plate.

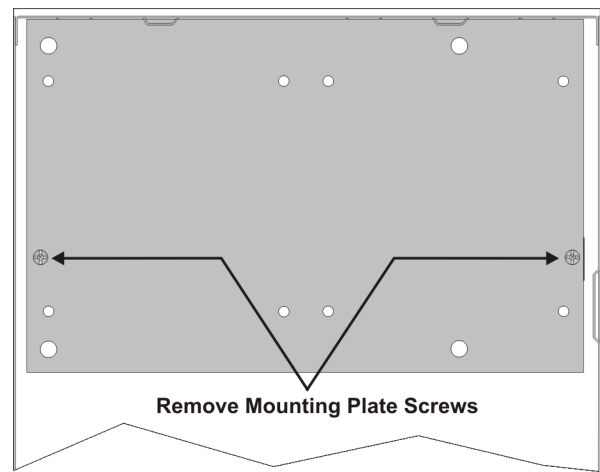


Figure 1. Remove the Two Mounting Plate Screws to Expose the Cabinet Mounting Holes

4. Mount the cabinet using the appropriate screws and anchors. See also Figure 2.

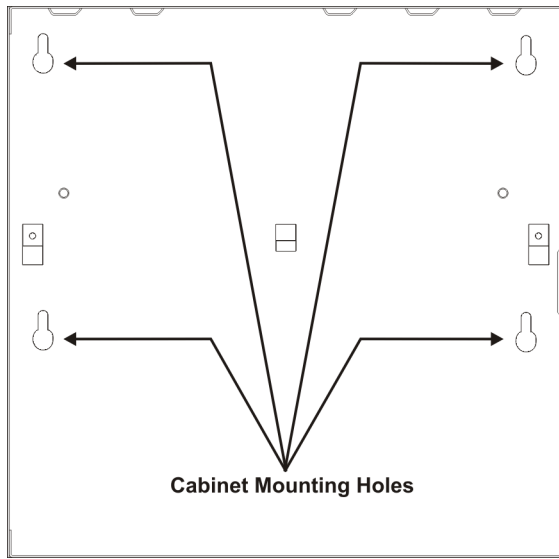


Figure 2: Cabinet Mounting Holes

5. Reinstall the mounting plate in the cabinet.
6. Insert the eight standoffs included with the cabinet as shown in Figure 3.

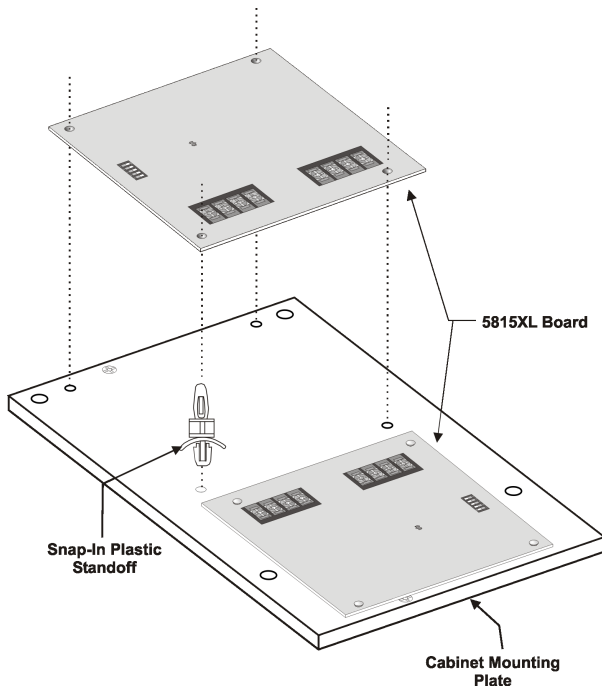


Figure 3: Standoff Installation



**SILENT
KNIGHT**

by Honeywell

7550 Meridian Circle
Maple Grove, MN 55369-4927
763-493-6455 or 800-328-0103
Fax: 763-493-6475
www.silentknight.com

© 2005 Silent Knight PN 151391 Rev A