



**SILENT
KNIGHT**

by Honeywell

SKSS Software Suite Model 5670

**Installation and
Operations Manual**

Part Number 151241 Rev F

CD Key _____
CD Key is not case sensitive

Contents

Introduction to SKSS	1
Features	1
About This Manual	1
System Requirements	1
Mouse Versus Keyboard	2
Online Help	2
Backing Up Your Data	2
Technical Support	2
How to Reach Us	2
Installing SKSS	3
Installing SKSS	3
Starting SKSS	4
Using Password Protection	5
Initial Password	5
Adding/Editing/Deleting Users and Passwords	5
Turning Password Protection On/Off	5
Setting Up Communications with the Panel	6
PC Modem Connection	6
Serial & USB Cable Direct Connection to the FACPs	6
Configuring Communications Between the PC and Panel	7
Adding/Removing the S10=255 AT Command Setting	7
SKSS File Types and Naming Conventions	9
File Menu	9
Programming	11
Views for IntelliKnight Panels	11
Views for the SK-5208	13
Views for the 5000-Series	14
Scheduling Jobs	15
The Communications Queue	15
Delete Jobs from the Queue	15
Job Status	16
Downloading and Uploading	17
Working with Event History Data	19
Combining Event History Files (Append History)	20
Detector Status Data	21
Communication Error Messages	22
Troubleshooting Communication Problems	22

Introduction to SKSS

The Silent Knight Software Suite (SKSS) is a tool for communicating with IntelliKnight addressable fire panels, IFP-Series fire panels, and SK-5208 fire panel. SKSS allows you to upload (receive) data from a panel to a PC. For example, you can upload event history from a panel so that the history can be sorted and viewed on screen or printed as a report.

Features

- Compatible with IntelliKnight 5820XL, 5808, 5700, IFP-1000, IFP-100, IFP-50, and SK-5208 fire panels
- Quick access to panel event history
- Upload detector status from IntelliKnight and IFP-Series fire panels
- Forward and backward compatible with panel software
- Free software upgrades downloadable from the Silent Knight web site (www.silentknight.com)

About This Manual

This manual will help you get started using SKSS and is future reference for operations that you don't frequently perform. The menus and screens in the software are your main source of information for the more commonly performed operations. You can also get help from the software's comprehensive online help system by pressing the [F1] key at any time. For information on general concepts refer to the panel's *Installation and Operations Manual*.

System Requirements

To operate SKSS software you must have a PC with the following minimum requirements:

- Windows® 98, 2000, ME, NT®, XP, or Vista
- 64 megabytes RAM
- 32 megabytes of free hard disk space
- VGA color or compatible monitor
- A Bell 212A/103 Hayes® compatible Plug and Play modem to connect to remote panels. You can also connect directly to all compatible FACPs using a 9-pin serial cable or connect directly to 5820XL, 5808, IFP-1000, and IFP-100 using an AB male USB cable.

Mouse Versus Keyboard

SKSS is designed to be used with a mouse. Using a mouse is the fastest and easiest way to operate the software. However, a mouse is not a requirement; all operations can be performed from the keyboard. See your Windows documentation for information on navigating in a Windows environment.

Online Help

You can press the [F1] key when you have SKSS running to bring up the online help system (not available during beta testing). The help screens describe each data entry area on the view and explain how to select options.

Backing Up Your Data

Protect your valuable data by frequently backing up files using the backup tool of your choice. Files with extensions *.[Panel Type]History* and *.[Panel Type]Detector* contain your data. For example, a file with the extension *.5808History* contains the history information from a 5808 panel. Back up these files whenever you make changes. (See Table 1 on page 9 for more information about types of files and extensions.)

Technical Support

Silent Knight provides 7/24 technical support from our Web site at www.silentknight.com. Print installation and operations manuals, get answers to frequently asked questions, download the latest software revisions, e-mail questions to technical support are just a few of the things you can do on our Web site. Silent Knight also offers free technical support.

How to Reach Us

Web site:

www.silentknight.com

Technical support:

Monday - Friday, 8:00 AM to 5:00 PM CST

800-446-6444

Installing SKSS

SKSS walks you through the installation process and can be installed and configured to work with Silent Knight control panels in less than ten minutes.

If you are a new user of Silent Knight software, go to the installation procedure below. If you have a version of Silent Knight's SK Analog Fire System Editor installed on your PC, the new software will not overwrite the directory or accounts you've already set up. Once you've installed SKSS, upload information from each panel to populate the software with your existing accounts. The files created in SK Analog Fire System Editor are not compatible with SKSS. For assistance with SK Analog Fire System Editor files, call Silent Knight Technical Support.

To install SKSS:

1. Place the SKSS Software CD in your PC.

Note: The CD Key is located on the inside of this manual's the front cover.

2. Follow the instructions on the screen to continue installation.


If SKSS installation does not start automatically after inserting the disk, use Add/Remove Programs in Windows Control Panel to start the installation process.

If an error occurs during installation, make sure you have sufficient memory and disk space on your PC (see page 1). If you have sufficient system resources and the software still will not install or run, contact Silent Knight Technical Support at 800-446-6444.


Starting SKSS

To start SKSS:

1. From Start, select Programs, Silent Knight and then click on Silent Knight Software Suite. The login dialog box appears.

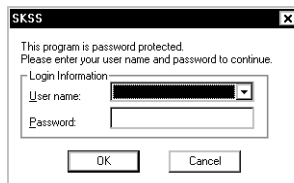

2. When logging on for the first time, select Master from the User Name dropdown list.
3. Press Tab to move to the Password text box and enter *pass*.
4. Click **OK**. The SKSS window appears.
Note: If you've used the SK Analog Fire System Editor, note that the Communications Queue is no longer a separate application. The Communications Queue is integrated into SKSS as shown below.

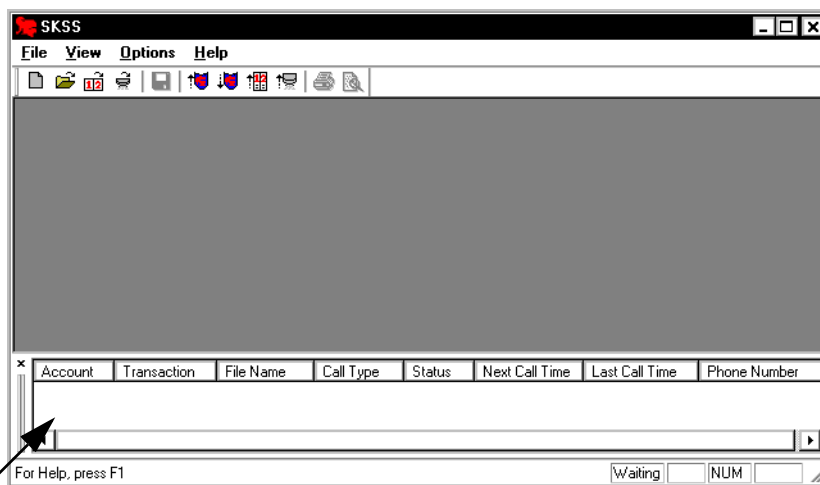

Information on communications between the panel and the PC will appear here.

Using Password Protection

Through the password system, you can make sure that only qualified users have access to SKSS. Or, if you prefer, you can disable password protection so that anyone in your facility can have access to SKSS.

Initial Password

SKSS comes with a Master User and Password. When logging on for the first time, select *Master* for the user and enter *pass* as the password. You can then change the password, add new users or disable password protection.

Adding/Editing/Deleting Users and Passwords

You can add up to 100 users to SKSS, in addition to the Master User. All users can perform all software operations. The Master User cannot be deleted.

To add a user:

1. From the Options menu, select Users & Passwords.
2. From the Users and passwords dialog box, click on **Add User**.
3. Enter up to 20 alphanumeric characters for the user and 20 alphanumeric characters for the user's password.
4. Click **OK**.



To delete a user:


1. From the Options menu, select Users & Passwords.
2. At the dialog box that displays, select the user you want to delete, then select Delete User.
3. Click **OK**. The user will be deleted.

Turning Password Protection On/Off

If you don't want to require users to enter passwords when they operate the software, you can permanently disable the dialog box for entering a password.

1. From the Options menu, select Users & Passwords.
2. From the Users and passwords dialog box, click on the Enable login dialog box check box to turn protection on or off. If there is a check mark in the box password protection is on. If there is no check mark in the box, password protection is off.

Click here to disable password protection.

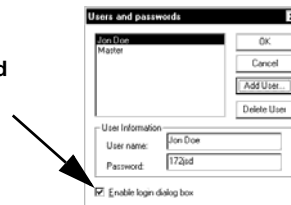

Setting Up Communications with the Panel

Before you can use SKSS to communicate with a panel, you must configure a communication device. To connect to a remote panel, you'll need to use your PC's modem. To connect directly to an FACP, you can use a serial cable, or with 5820XL, 5808, IFP-1000, and IFP-100 panels you can use a USB cable.

PC Modem Connection

To communicate remotely with a panel, you will need to have a Hayes® compatible modem installed on your PC. Follow the instructions in your PC and modem manuals for connecting a modem to your PC.

Serial & USB Cable Direct Connection to the FACP's

To communicate locally with a panel, you can connect a 9-pin serial cable to the FACP serial port or an AB male USB cable to the USB port (on all FACP's except the 5700 and the IFP-50). See the figure below.

Note: The panel will go into ground fault trouble if you are connected to a PC powered by AC while the cable is connected. The trouble will clear when you disconnect the serial cable .

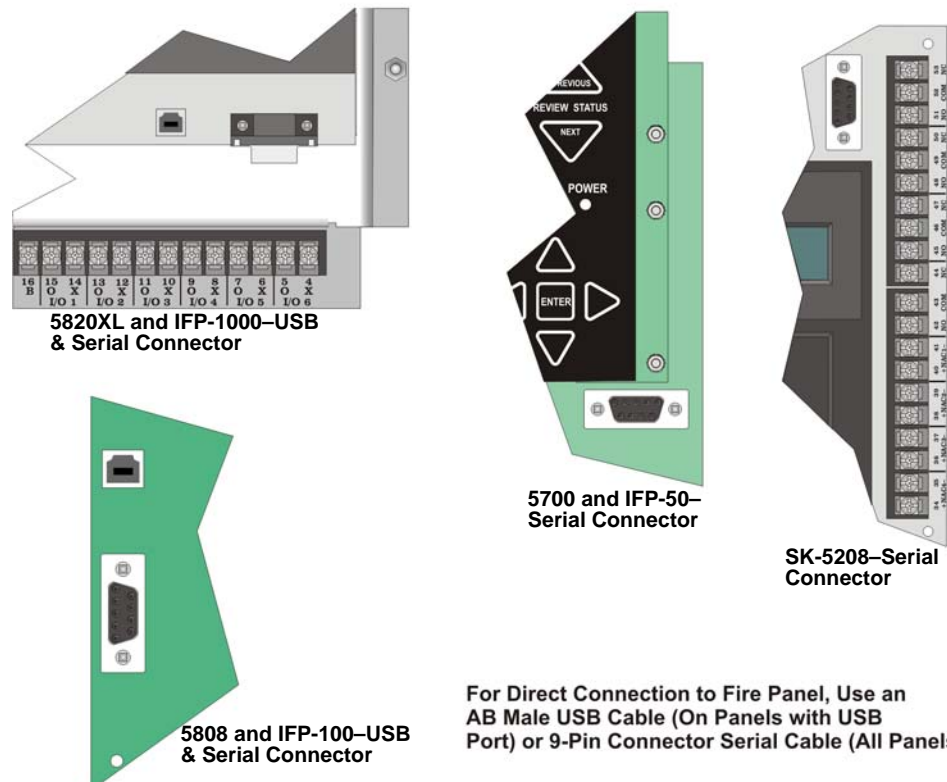



Figure 1: Direct Connection Ports on Silent Knight FACP's.

Configuring Communications Between the PC and Panel

To communicate with the panel, you will need to select the PC's modem or if connecting directly to the panel with a serial or USB cable, select the com port to which the cable is connected.

To configure the communications device:

1. Select Options from the menu, then Communications.

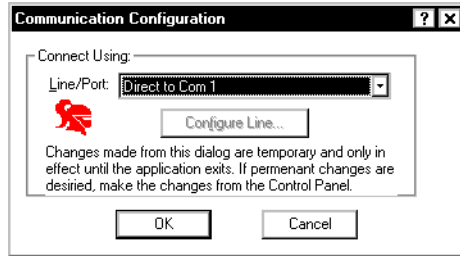

2. Select the PC's installed modem for modem communications or the com port to which the serial or USB cable is connected for direct connection to a FACP from the Line/Port drop-down list.

Note: When communicating with some panels, communications speed is improved by adding the S10=255 AT command. SKSS will automatically check to see that the S10=255 AT command is set in the Windows Advanced Connections Setting of your modem when dialing certain panels. If not, SKSS will attempt to send the command. To configure the modem with this command, see the following paragraph.


Adding/Removing the S10=255 AT Command Setting

The S10=255 AT command ensures the most efficient operation for modem to panel communications. This command will improve communications reliability between the modem and compatible Silent Knight fire panels.


The S10=255 setting may not be useful for other communications applications. During these times you can disable the S10=255 AT command. The next time you use SKSS, you will be reminded that the S10=255 command is not set.

To add the S10=255 AT Command Setting:

1. Click on **Configure Line** in the Communication Configuration dialog box.

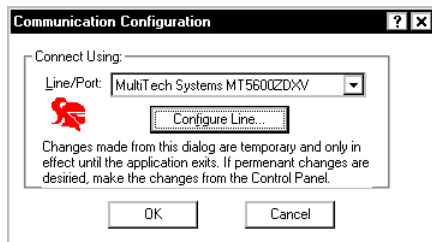

2. Click on the Connection tab, then Advanced from the modem settings dialog box.

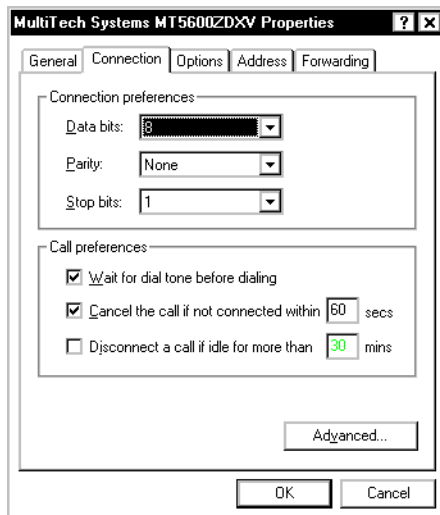

3. Type S10=255 in the Extra settings text box.



To remove the S10=255 AT Command Setting:

1. Click on the Windows **Start** button, then Settings, and finally Control Panel.
2. Double click on Modems. The Modems Properties dialog box appears.
3. Select the modem from the modem list and click on **Properties**.
4. Click on the Connection tab, then **Advanced**.
5. Delete S10=255 in the Extra settings text box and click **OK**.

SKSS File Types and Naming Conventions

SKSS has three two file types. Each file type stores different information about a specific panel or account. File types are identified by their file extension as shown in the table below. When you are working with the files, a unique icon will display in the upper left corner.

Table 1: Types of Files

Icon	File Type	Contains	Extension	Panels
	Event History	Events that occurred at the panel. This file type is uploaded from the panel.	.[Panel No.]History	All
	Detector Status	Status of detectors. This file type is uploaded from the panel.	.[Panel No.]Detector	5820XL, 5808, and all IFP-Series

File Menu

The file menu contains options that apply to all Windows applications (such as Open, Save, and Save As), as well as some options that are unique to SKSS. The chart below describes SKSS specific options.

Table 2: File Menu Options

Option	Description
Open Event History	Open an event history file that has been uploaded from a panel to the PC.
Open Detector Status	Open a detector status file that has been uploaded from a panel. This option is for 5820XL and IFP-1000Rev. 1.2 and later, 5808, 5700, IFP-100, and IFP-50 panels.
Upload Event History	Upload event history from IntelliKnight, IFP-Series, or SK-5208 panels to the PC. Once the event history has been uploaded it can be viewed on screen and printed.
Upload Detector Status	Upload detector status from IntelliKnight and IFP-Series panels to the PC.
Print	You can print any of the file types from SKSS. When the file you want a report from is open, select Print from the File Menu. Prior to printing you can select Print Preview from the File menu to view the report onscreen.

Scheduling Jobs

The panel and a PC can communicate with each other by downloading (computer sends data to the panel) and uploading (panel sends data to the computer). This section of the manual describes communication operations.

The Communications Queue

The Queue is a list of completed and scheduled tasks between panels and SKSS. When a task appears in the Queue window, its status and other information will display next to the account number.

The screenshot shows the SKSS - 5820DL 1.5820Account window. The account information is as follows:

Customer Account #:	5820	Panel Type/Version:	5820-L 7
Name:	Anderson Washers		
Contact:	Jon Doe		
Customer Phone:	123-456-7890		
Address:	5637 Jefferson Parkway		
City:	Pleasantville		
State:	MN	Zip:	55213
Panel Phone Line 1:			
Panel Phone Line 2:			

The communications queue table is shown below:

Account	Transaction	File Name	Call Type	Status	Next Call Time	Last Call Time	Phone Number
5820	Download	C:\Program Files...	Call Once	Aborted by User			
5820	Download	C:\Program Files...	Call Once	Waiting	10/20/01 3:43:20 PM	10/19/01 3:42:57 PM	

Annotations for the queue table:

- Describes the type of job that has been completed or is scheduled to occur. (Points to Transaction)
- File name assigned on the PC where the information is downloaded from. (Points to File Name)
- The status of these jobs is Waiting because they have been scheduled to happen at a later time. (Points to Status)
- This panel is connected directly to the PC so no phone number appears. (Points to Phone Number)

Figure 2: Communications Queue Example

Delete Jobs from the Queue

All jobs remain in the queue until you delete them. You can delete jobs that are finished and jobs that are scheduled.

To delete a job from the Queue window:

1. Highlight the job you want to delete by clicking on it.
2. Press on the [Delete] key or right click to select from the menu that appears, then click **Delete**. This action cannot be undone.

Job Status


Jobs or accounts listed in the Queue window are assigned a status. The chart below describes all possible status types.

Table 3: Queue Job Status

Status	Description
Waiting	The job is waiting for processing. Another job is currently being processed or the job is timed to execute at a later time.
Error	An error occurred during processing. No data was transferred. See page 22 for more information.
Processing	The job is currently processing, for example, sending or receiving data.
Complete	The job has completed successfully. Completed jobs remain on the queue until an operator deletes them.
Aborted by User	The job was cancelled during processing by an operator. Aborted by User jobs remain on the queue until an operator deletes them.
Timed Out	The job was not completed because communication was not established during the programmed timeframe.
Security Not Granted	The panel did not answer the call because an incorrect password was used by the operator who attempted to process the call.
No Carrier or No Dialtone	The job was not processed because communication was not established. This message can indicate several problems. See page 22 for more information.
Modem Error	The job was not processed because the software detected a problem with the modem. This message could indicate that modem is not turned on, needs to be initialized, or another problem. See page 22 for more information.
Busy Signal	The job was not processed because the communication device encountered a busy signal when attempting to call.
No Answer	The job was not processed because the initiating communication device did not receive an ACK signal.
Detector Status Not Supported	The detector status feature is not available for Rev. 1.1 panels; Revision 1.2 and later support the feature. If you attempt to run the Upload Detector Status feature on a Rev. 1.1 5820XL or IFP-1000 panel, you will receive this message.

Uploading

You can upload various options, depending on the panel you are working with, such as panel programming settings and event history as shown in Table 7. When uploading, you are sending data from the panel to the computer.

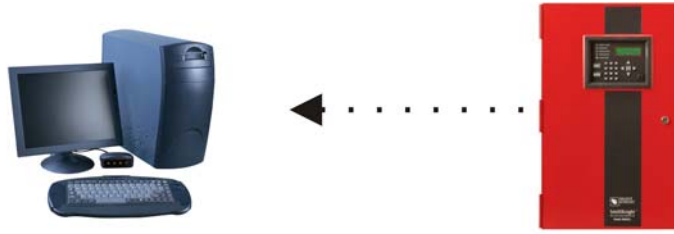

Upload: Receive information from the panel.

Table 4: Download and Upload Options by Panel

Option	IntelliKnight	IFP-Series	SK-5208
Event History	•	•	•
Detector Status*	•	•	

* The option for uploading detector status that appears on the file menu is available for Rev. 1.2 and later panels only.

To upload panel information:

1. From the File Menu, select the upload menu item you want to schedule.



2. In the appropriate locations in the dialog box, enter your selections for the following options:
 - File Name: To upload assign a name to the file that will be uploaded from the panel. You can use the Browse option to select from the list of available files. If you do not select a name for the file, it will be automatically named with the panel model and the date and time of the download.
 - Account Number: Enter the panel account number. The default value for each control panel is listed in the installation manual for that control panels.
 - Computer Code: Enter the code that allows access to the panel from a PC. The default value for each control panel is listed in the installation manual for that control panels.
 - Phone Number: If you are using a modem for communication, enter the panel phone number.
 - Call Option: Select how often and when the call should be placed.
 - Answering: Select the preferred options if the phone line used by the PC's modem has an answering machine installed. This feature is not used when connecting directly to a panel.
3. Click **OK** to begin uploading or to post the job to the Queue.

Working with Event History Data

You can upload event history from IntelliKnight, IFP-Series, and SK-5208 panels. When uploading a file from the panel's event history buffer, you will have all of the most recent events that have occurred at the panel. Not all the events may be of interest to you at any given time. You can use the software to select only events that meet particular criteria, sort events, print and combine files of events.

1. Once event history has been uploaded, select Open History from the File Menu.
2. Select a file to open. You can scroll through the list of available files or enter the file name in the File Name area in the dialog box.
3. From the next dialog box that displays, select options for controlling how the history is displayed on screen and printed.

Refer to the online help for more details about these options (not available during beta testing). If you want a printed report of the data, select Print from the File Menu.

The screenshot shows the SKSS Event History window with the following components:

- Sort Order:** A dropdown menu set to "Number".
- Date Filter:** Starting Date: 1/ 1/95, Ending Date: 3/ 6/00.
- Time Filter:** Starting Time: 12:00:00 AM, Ending Time: 11:59:59 PM.
- Show These Event Types:** A list of checkboxes for Alarms, Restores, Troubles, Point Disable, Test, Operator Resets, and Local/Unreported, all of which are checked.
- Event History Table:** A table with columns for #, Date, Time, and Event. The events listed include MP Trouble Zone 1, Manual Pull Trouble Zone 001 [M33:P097], Det Trouble Zone 1, Photo Det Trouble Zone 001 [M13:P073], Gnd Fault Restore Module 05, Gnd Fault Restore Module 03, Auto Test Channel 1, and Det Trouble Restore Zone 2.
- Append History File...:** A button to append new history data.
- Bottom Panel:** A table with columns for Account, Transaction, File Name, Call Type, Status, and Next Call Time.

Annotations with arrows point to the Sort Order dropdown, the Date and Time filter sections, and the Show These Event Types list.

Figure 3: Event History Window.

Combining Event History Files (Append History)

The IntelliKnight and IFP-Series panels can store up to 1000 events and SK-5208 panels can store up to 150 events. When a panel reaches its 1000 event capacity, it begins deleting events starting with the oldest. When you save an upload, you create a file that you can save permanently or for as long as you need it. You can also append (or add) events from another file so that uploaded event files will be combined, saving you from having to search through multiple files.

For example, suppose a panel reported 1000 events every two weeks, but you wanted to retain files of events by month. Since the panel would start deleting events as more were added, the panel's buffer would never contain an entire month of data. You could compensate for this by uploading event history twice per month, once for the first half of the month and once for the second half. You could then Append the events from the second half of the month to the file for the first month. Your file would then contain events for an entire month.

To add history events from one file to another:

1. Open the primary history file by selecting Open Event History from the File Menu.
2. With a history file open, click on **Append History File**.
3. Select the file that you want to add to the primary history file. You can scroll through the list of available files or enter the file name in the File Name area in the dialog box. Event history files have the extension *.**[Panel Type]History***.
4. The file now contains event data from both files. When you save the file, you may want to use the Save As feature to give the combined file a unique name.

Detector Status Data

When you upload detector status from an IntelliKnight or IFP-Series panel, you will have a file containing the status of all detectors in the system. Not all the detectors may be of interest to you at any given time. You can use SKSS to select only detectors that meet particular criteria, such as, detectors that are out of compliance or that need maintenance. You can also sort the file by various criteria and print the information that you need.

1. Once detector status has been uploaded, select Open Detector Status from the File Menu.
2. Select a file to open. You can scroll through the list of available files or enter the file name in the File Name area in the dialog box. Detector status files have the extension:
.[Panel Type]Detector.
3. The Detector Status View will display. Select options for controlling how the detector status is displayed on screen and printed. A dialog box similar to the one below will display. Refer to the options on the help screen for complete information about how to select these options. If you want a printed report of the data, select Print from the File Menu.

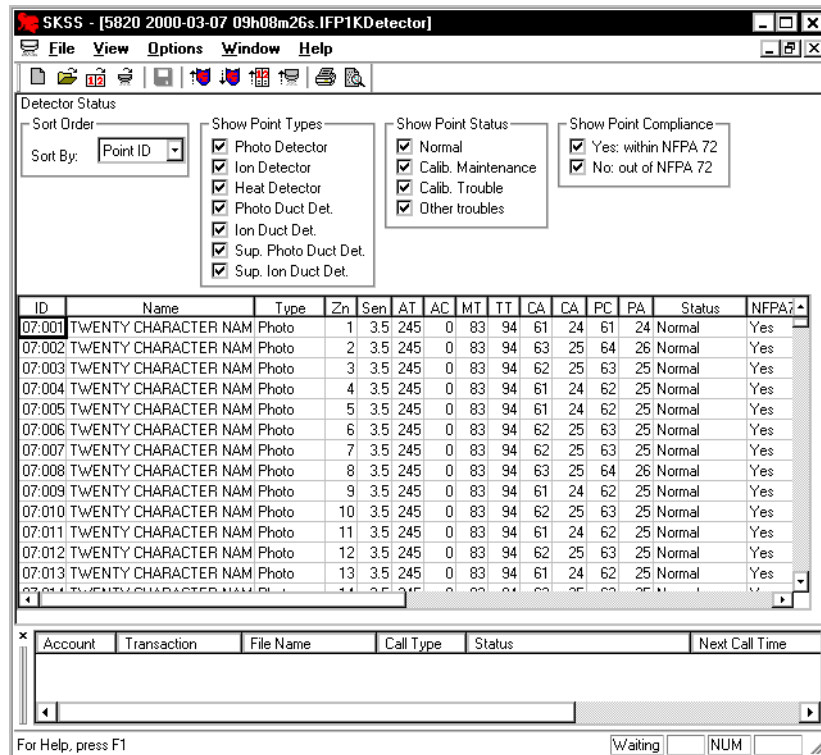


Figure 4: Detector Status Dialog Box

Communication Error Messages

The chart below describes communication error messages that could occur during processing. These messages indicate that transfer of data did not occur. If you receive one of these messages and do not know what caused it, see Troubleshooting Communications problems below. If the problem persists, contact Silent Knight Technical Support.

Table 5: Communication Error Messages

Message	Explanation
Error	An error occurred during processing of the call. No data was transferred. This message can indicate a wide variety of problems, including a problem with the modem or noise on the telephone lines.
Timed Out	The job was not completed because communication was not established during the programmed timeframe.
No Carrier	The job was not completed because the communication device could not establish communication.
Modem Error	The job was not completed because the software detected a problem with the modem. Make sure the modem is turned on. Try reinitializing the modem.
Busy Signal	The communication device encountered a busy signal when attempting to communication. Try again later.
No Answer	The communication device did not receive an ACK signal.
No Dialtone	A dialtone could not be detected by the communication device. Check that the receiving device is turned on and is connected to the phone line.

Troubleshooting Communication Problems

Troubleshooting communication problems can be complex because the problem could be at either end of the connection. If communication did not occur or was incomplete, here are some things to try.

When using a modem, make sure the communication device is connected to the phone line and that dial tone is present. If you suspect that noise on the telephone line is causing a problem, try any or all of the following:

- Hang up and try again.
- Initialize hardware. This will happen any time you close the queue and reopen it. You may need to reset the modem, especially if you receive the “Modem Error” message.



**SILENT
KNIGHT**

by Honeywell

12 Clintonville Road
Northford, CT 06472-1610 USA
203-484-7161
Fax: 203-484-7118
www.silentknight.com

© 2009 Honeywell International Inc.